



USER MANUAL

SMARTLEVEL⁰

for washbasin in public
and bi stable solenoid valve



Disclaimer

This manual was created with great care.

Oblamatik AG shall not be liable for technical or typographical errors and reserves the right to make changes to the product and/or the instructions at any time without notice.

Oblamatik is not liable or responsible for direct or indirect damages, which is in connection with the installation or operation of this product.

Imprint

This manual is a publication of Oblamatik AG, Gaeuggelistrasse 7, CH-7000 Chur, SWITZERLAND.

All rights including translation are reserved. Reproduction by any method, for example, photocopies or electronic recording are not allowed. Reproduction in full or partly is prohibited.

These instructions represent the technical status at time of printing.

Notice



The user manual must be given to the user.

Please read this user manual carefully before using the system and keep in a safe place for future reference.

To reduce the risk of injuries, scalding and electrical shock, the safety precautions below must be installed and followed



Risk of injury

This device is not intended for use by persons with different or reduced physical, sensory, or mental abilities, or who lack experience or knowledge, unless they are under the supervision of or receive training for the use of the device by a person responsible for their safety.

CONTINUOUSLY TURNING THE CONTROL WHEEL IN THE CLOCKWISE DIRECTION MAY OVERRIDE THE PRE-SET MAXIMUM TEMPERATURE, RESULTING IN A RISK OF SCALDING.

If the power cord gets damaged, it must be replaced by the manufacturer, its authorized service agent or qualified personnel to avoid danger. Never operate the device with a damaged cable or plug! Do not pull on the power cable as this could cause damage to the cable and cause electric shock.



Malfunctions, Possible cause, Solution

The device is not working.

Start Diagnostic. Check that:

- The control unit is connected to the mains
- There is no power supply failure
- The electric plug inside the control unit is well connected

No water flow when activated. Check that:

- Your faucet is connected to the water supply
- Both angle valves are fully opened
- Check another faucet in the house if water is running
- The water supply hoses are not bent or twisted
- The supply hoses might be soiled
- The control unit is connected to the mains

Minimal water flow. Check that:

- Both angle valves are fully opened
- The water supply hoses are not bent or twisted
- The supply hoses might be soiled

Continuous water flow

- Press the ON/OFF button
- Close angle valve or main valve
- After a few minutes, open again. It's still a continuous water flow, close valve and contact your installer.



Use soft cloth, soapy solution and water for regular care. Wipe with a dry cloth.

Avoid the use of abrasives or solvents, which damage the surface.

Damage caused by inappropriate treatment by the user, is not covered by our guarantee.



for washbasin application for public
and bi stable solenoid valve



Basic functions (via menu button)

Water ON

Press 1 x: water ON

Water OFF

Press 1 x: water OFF

Activating the cleaning mode

Deactivate Interface
(disabling of water flow for 45 sec)

Press & hold until LED color ring is
flashing GREEN. Release knob immediately.

Reactivate Interface

Press & hold until LED color ring GREEN goes
out or wait 45 sec (automatic reactivation).

The following settings are active
for 5 min after initiation:

Maximal water flow time

Press & hold for 2 sec until LED color ring is
flashing RED. Release knob immediately.

Press & hold for 2 sec and adjust desired
water flow time.

Changing between the water flow time

Press 1 x briefly

Saving the settings

Press & hold for 2 sec until LED color ring is
flashing 2 x in the selected color

Flashing color Water flow time

LIGHT BLUE	5 sec
BLUE	8 sec

PINK	10 sec
RED	15 sec
YELLOW	20 sec
GREEN	30 sec
LIGHT BLUE	45 sec
BLUE	1 min
PINK	2 min
RED	3 min
YELLOW	4 min
GREEN	5 min
WHITE	close

Hygienic flushing

Press & hold for 2 sec until LED color ring is
flashing RED. Release knob immediately.

Press 1 x briefly until LED color ring is
flashing YELLOW. Release knob immediately.

Press & hold for 2 sec and adjust desired
interval-flushing.

Changing between the interval-flushing

Press 1 x briefly

Saving the settings

Press & hold for 2 sec until LED color ring is
flashing 2 x in the selected color.

Flashing color Interval

LIGHT BLUE	OFF
BLUE	1 day/10 sec
PINK	2 days/10 sec
RED	3 days/10 sec
YELLOW	7 days/10 sec
WHITE	close

Color setting of the LED color ring

Press & hold for 2 sec until LED color ring is
flashing RED. Release knob immediately.

Press 2 x briefly until LED color ring is flashing
GREEN. Release knob immediately.

Press & hold for 2 sec, choose desired color.

Changing between the colors

Press 1 x briefly

Saving the settings

Press & hold for 2 sec until LED color ring is
flashing 2 x in the selected color

Available Colors

LIGHT BLUE
BLUE
PINK
RED
YELLOW
GREEN
BLACK (inactive)
AMBIENT LIGHT
WHITE (close)

Is operating with a connected bi stable solenoid valve.

Use

No flow

tap

water flows

tap / selected Timeout

Cleaning

No flow

touch & hold
for 2 sec

cleaning mode

touch & hold for 2 sec / 45 sec

Setup – available in first 5 minutes after power up

No flow

touch & hold
for 2 sec

timeout - setting

touch & hold
for 2 sec

5 sec

tap

touch & hold
for 2 sec

tap

8 sec

tap

10 sec

tap

15 sec

tap

20 sec

tap

30 sec

tap

45 sec

tap

1 min

tap

2 min

tap

3 min

tap

4 min

tap

5 min

tap

close

tap

tap

close

hygiene - setting

touch & hold
for 2 sec

off

1 day / 10 sec

2 days / 10 sec

3 days / 10 sec

7 days / 10 sec

close

tap

tap

close

illumination - setting

touch & hold
for 2 sec

cyan

blue

magenta

red

yellow

off

running

close

tap

tap

close

close

touch/hold for 2 sec

touch & hold
for 2 sec

save & close

No flow



SANITARY TECHNOLOGIES

Oblamatik AG
Gäuggelistrasse 7
CH-7000 Chur

+41 81 286 70 00
info@oblamatik.ch
oblamatik.ch